

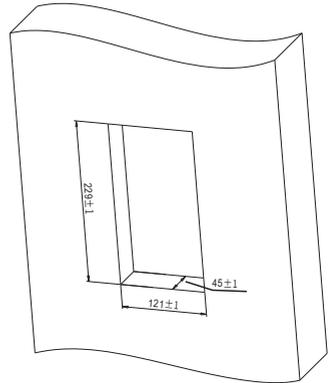


# Video Intercom Bracket


## Quick Start Guide

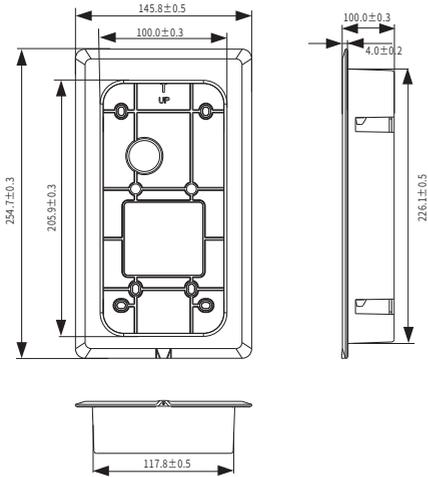


1. Cut an installation hole as shown above.

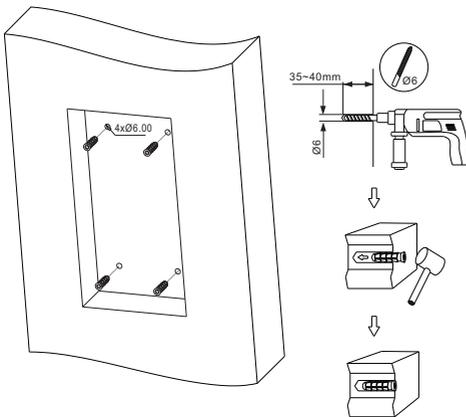


2. Drill four screw holes and insert screw anchors as shown above.

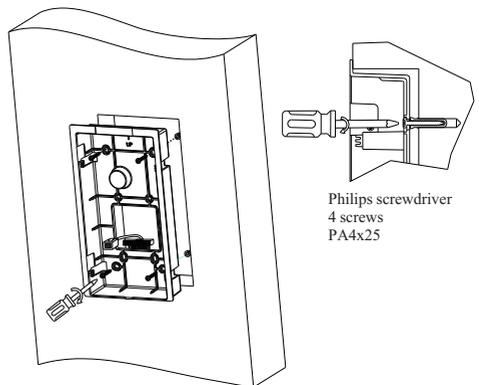


3. Pull the cable out from the wall and install the gang box into the wall with the screws provided.

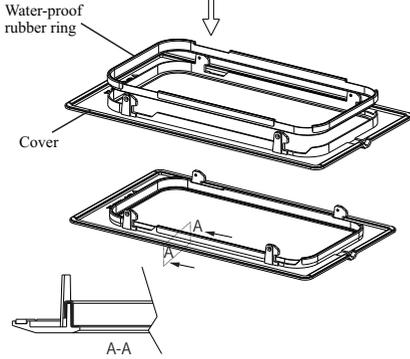


4. Put the water-proof rubber ring onto the bracket of the cover as shown above.

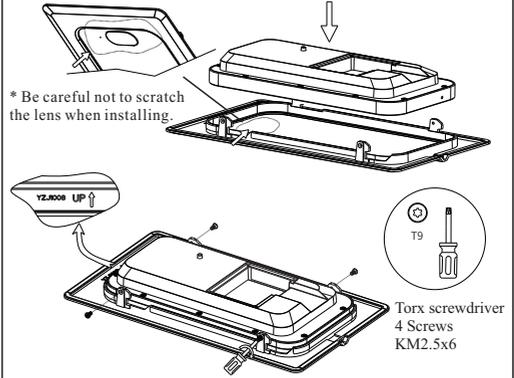


5. Insert the device into the cover and secure it with four screws. Note that the lens of the device should be near "UP".

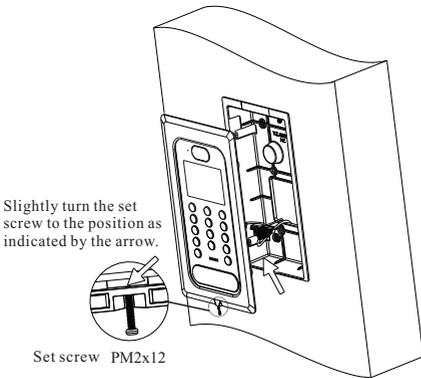


6. Connect the cables and then insert the set screw as shown above (Do not fully tighten the screw).

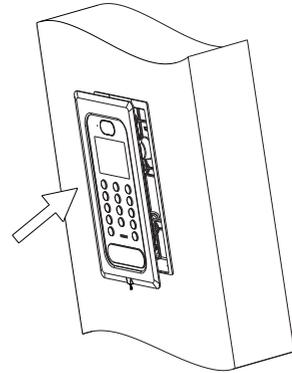

7. Install the main unit to the gang box as shown above.

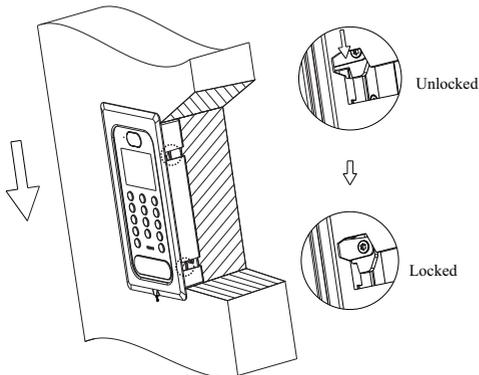

8. Move down the main unit until the cover is locked.

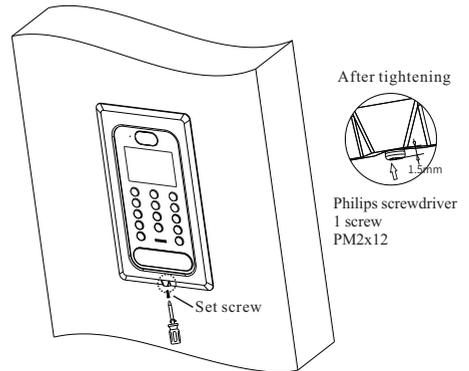

9. Secure the cover and gang box by tightening the set screw.